


1. Drill 4 holes using 8 mm drill bit and insert Plastic Anchors

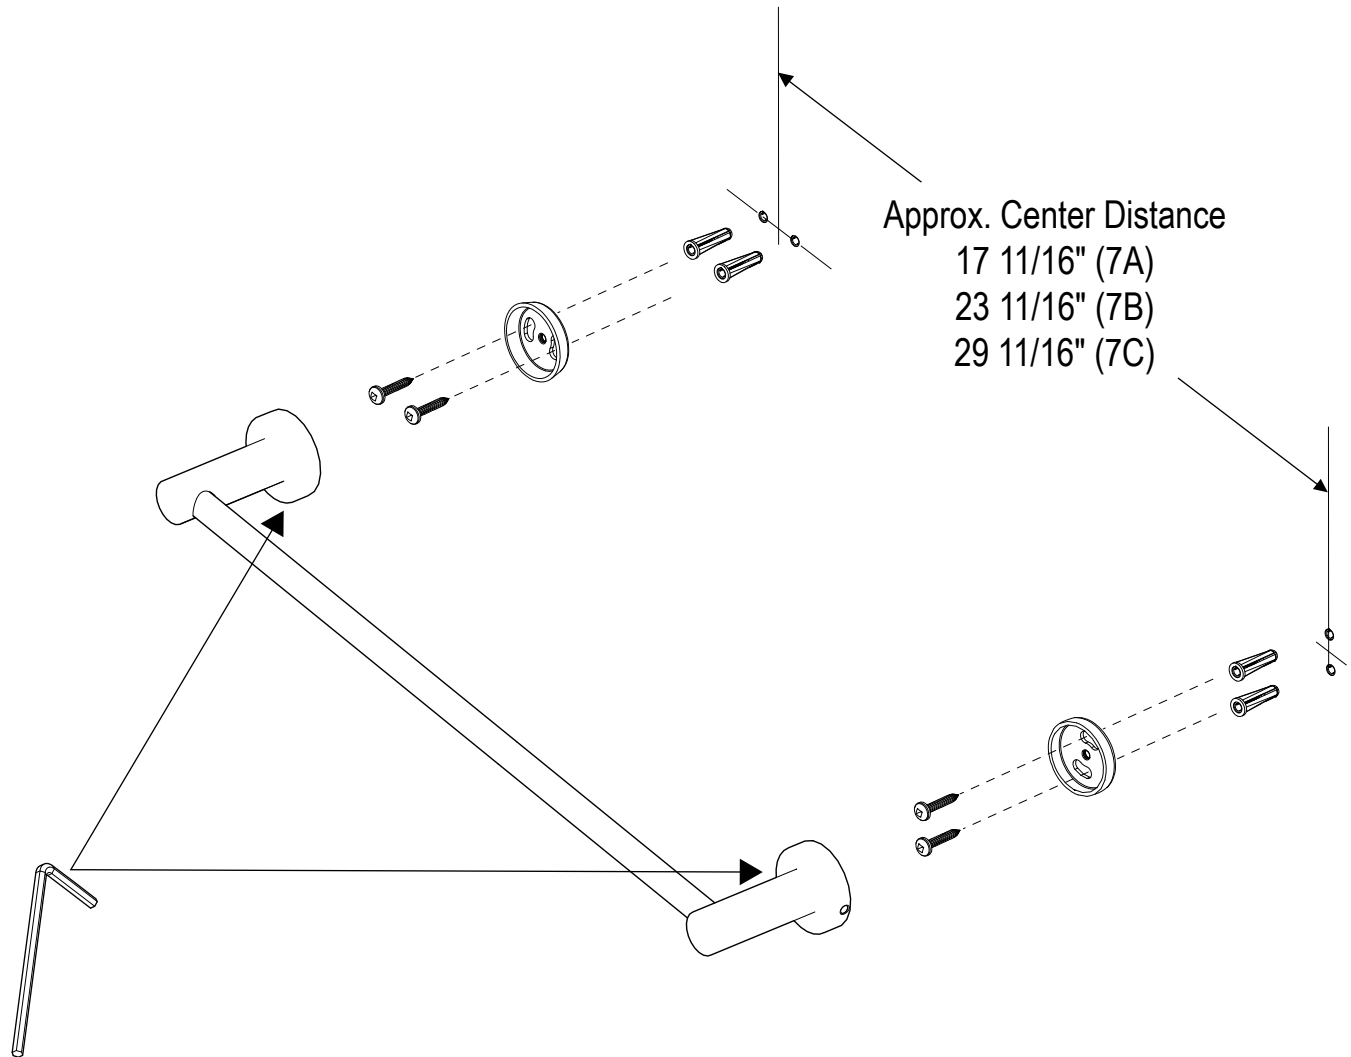

2. Secure Towel Bar by tightening Set Screws on both posts