
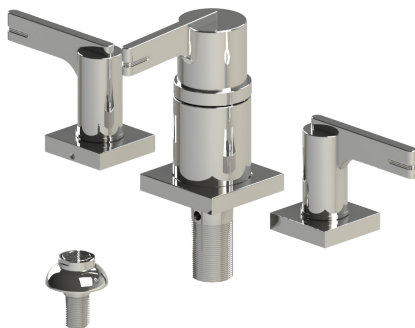
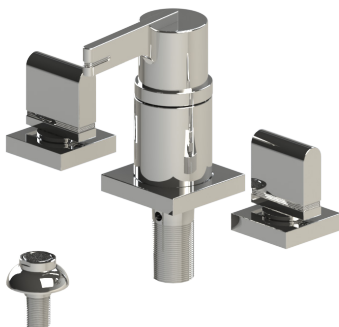


ASSEMBLY INSTRUCTION**6C/6DRTL & Q****BIDET FITTINGS WITH SPRAY , DIVERTER WITH BUILT-IN VACUUM BREAKER****6CRTL
6DRTL****6CRTQ
6DRTQ****REMOVAL OF FIXTURE:**




Always turn the water supply off before removing the existing fixture or disassembling a valve. Open both fixture handles to relieve water pressure and to ensure that the water has been successfully turned off.

CARE OF FIXTURE:

The use of warm water and a soft cloth is all that is required to clean Rubinet products. The patina of our living finishes (Oil Rubbed Bronze & Tuscan Brass) will change as a result of normal use. Applying Mineral Oil on occasion will create a softer look, subtle color changes and character.

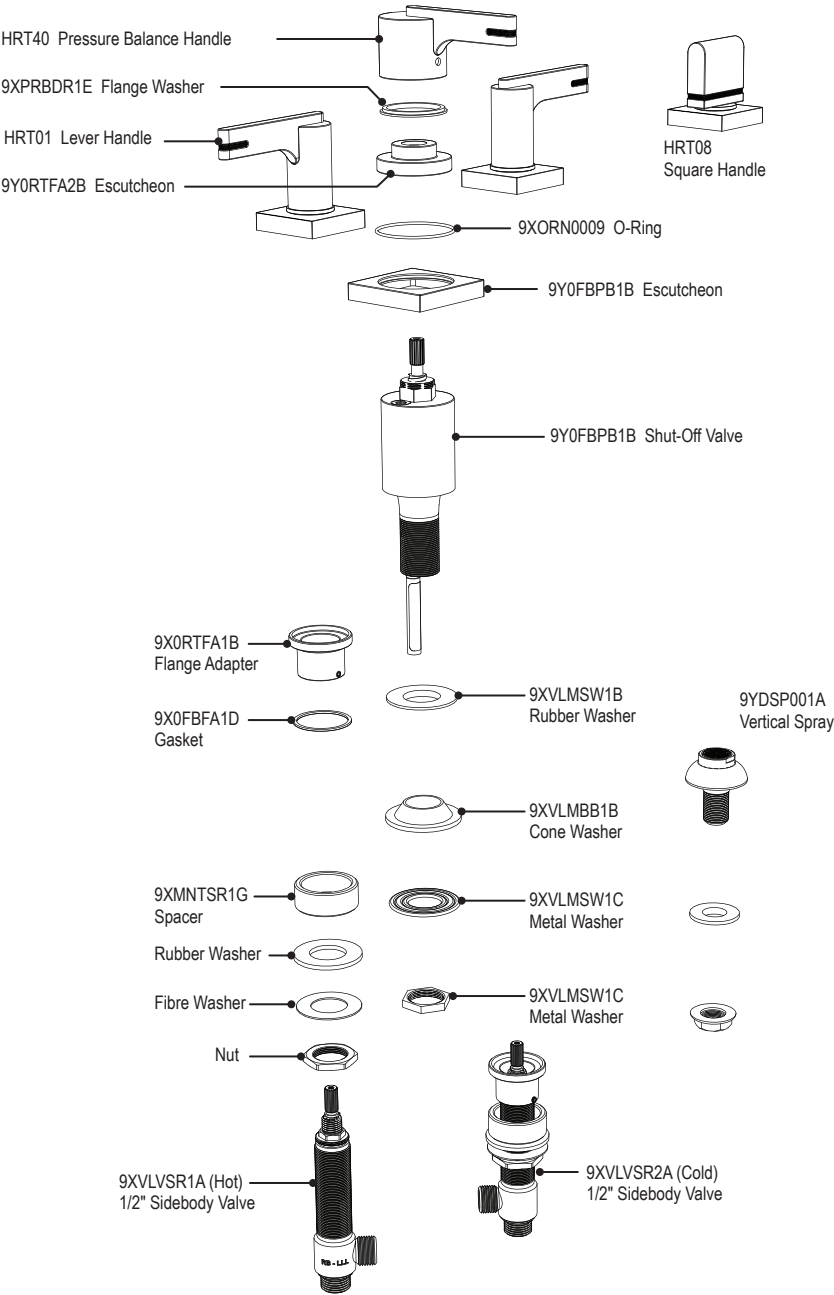

1

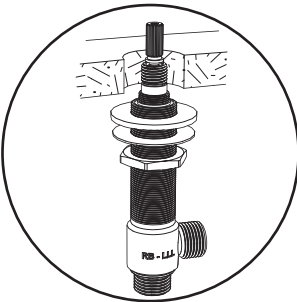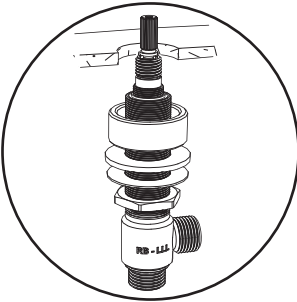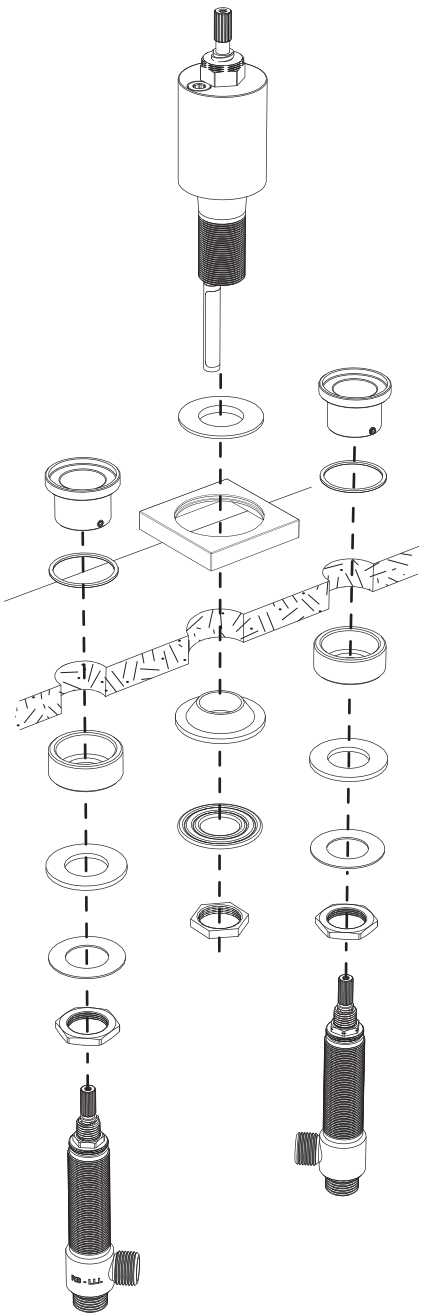

* Less than 1 1/2" Deck requires SPACER as shown above. Thicker than 1 1/2" Deck does not require spacer.

