


1. PLACE LEVER REST ARM ASSEMBLY INSIDE THE BOWL
AND SCREW SHANK NUT COUNTER CLOCKWISE UNTIL TIGHT.

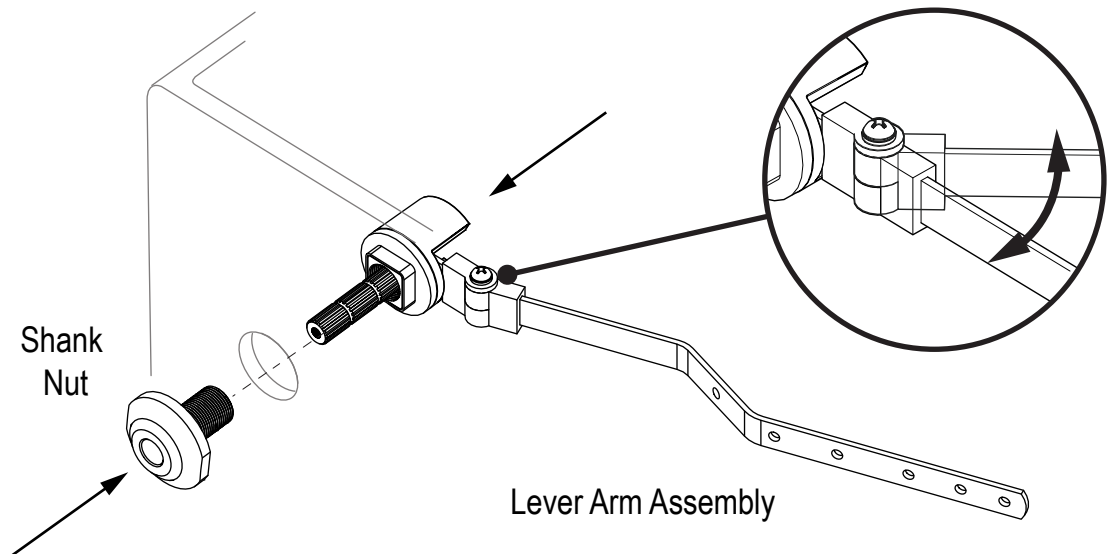

2. ATTACH HANDLE TO THE LEVER TOGGLE
AND TIGHTEN SET SCREW TO SECURE.

